

# Wall Fountain Assembly

www.uniquegardendecor.com

(866) 382-8600


## ASSEMBLY:

Step 1. Put the pump into the water basin. Connect the water tube A to the pump B.

Step 2. Route the pump's power cord out through the hole on the back of the basin.

Step 3. Put the pump's power cord properly into the channel connected to the hole, so the cord lays flat against the wall fountain, connect the pump cord to the transformer

Step 4. Using proper hanging hardware, measure your height and mount your hardware into the surface where the fountain is to hang. Hang the fountain on the wall using the mounting hole in the top portion of the wall fountain on the back. Make sure the hardware and the wall surface where the fountain is to hang can support the weight of 50 lbs.

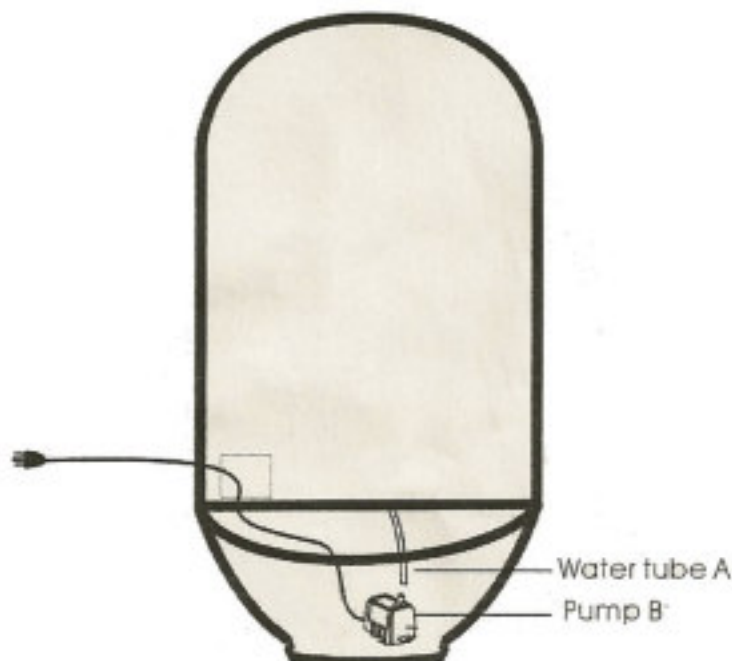

## WARNING:

- To extend the life of the pump, every 10 days open the pump as instructed in pump instructions and clean all debris
- Change the water every 10 days and keep leaves and debris from accumulating the water basin, as this may cause the pump to stop operating.

## CAUTION:

- Keep your fountain clean by using a soft cloth. Avoid using cleaner with acids or alkali which could cause corrosion, staining, and paint discoloration
- The use of Chlorine or Chlorine bleach may damage the finish of your fountain. When cleaning your fountain, it is best to test the detergent on an underside or back surface to determine the detergent suitability. We recommend the use of a mild, non abrasive detergent. To avoid foaming, please rinse the fountain thoroughly to remove all the detergent.
- If the water could not flow out the fountain, it might be caused by the pump or the water tube. First you should turn off and turn on the pump again, if the water could not flow out of the fountain again, please check to see if the water tubes are clean and unobstructed.