



YARDART

uniquegardendecor.com

(866) 382-8600

FT- 171 Corsini Wall Fountain (2 pieces) COMPONENTS AND PARTS LIST


Revised May 24, 2012



FT-171A
26.5"L x 16"W X 40.5" H
Lbs



FT-171B
9"L x 5.5"W X 5" H
6 Lbs

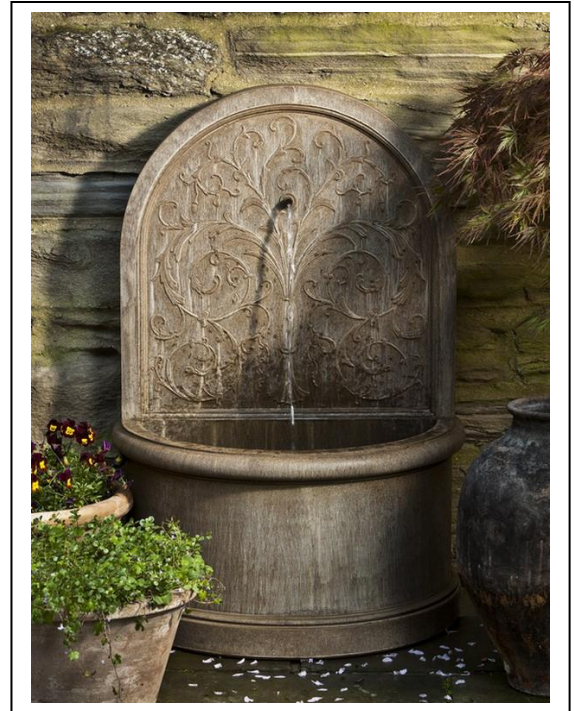

NOTE: Component photos are not to scale

Fountain holds approximately
5-10 gallon(s) of water

This fountain uses
cover FTNCOV-MED

Pump Kit Parts List

- PK120 pump (1)
- #10 Compression stopper (1)
- Approx. 6" length of 1/2" black non-kink tubing (1)
- 4mm Allen wrench (1)
- Hose clamps (3)
- Note – Hose clamp may be used as flow restrictor

Tools you will need

Level



4mm Allen wrench (included)



FT- 171 Corsini Wall Fountain (2 pieces) **ASSEMBLY INSTRUCTIONS**

Revised May 24, 2012

1. Make sure you are assembling your fountain on a level surface.
2. This fountain will need to be installed on a surface capable of holding a minimum of 375 pounds in approximately a 2 square foot area.
3. Position the basin (FT-171A) where the fountain is to be installed, ensuring that it is level.
4. Feed the pump cord all the way through the hole in the basin.
5. Leave enough cord that you can work with the pump, but not so much that it fills the pump well.
6. **See enclosed stopper assembly instructions and complete before continuing.**
7. Place a hose clamp over one end of the 1/2" non kink tubing.
8. Insert that end of the 1/2" non kink tubing onto the pump water outlet and tighten the clamp.
 - a. Note – one of the hose clamps may be placed on the tubing prior to installation as a flow restrictor if necessary
9. Place the other end of the tubing over the copper pipe protruding from the back of the water feature basin.
10. Place the pump cover (FT-171B) over the pump
11. Fill basin with approximately 5 - 10 gallons of water depending on desired sound (less water will provide more sound).
 - a. Note – do not allow pump to run dry as it will cause damage to the pump.

WINTER CARE AND GENERAL FOUNTAIN INSTRUCTIONS

- W I N T E R C A R E -

Fountain bowls/tops and other fountain components, which collect water, should not be left outside in the winter since any component, which fills with water and freezes may crack. Likewise components such as pedestals, which remain in a basin, filled with water, which then freezes, may also crack or crumble. Ideally, therefore, a fountain should always be stored indoors or in a dry protected place such as a covered porch away from the elements. However, if a fountain must be left outside:

(1) Remove pump, rubber stoppers, drainpipes, finials, and other small components for storage indoors. Note that stoppers or drainpipes are removed to allow drainage in the event water accumulates in any basin. Compression stoppers may be left on the pump cord for easier assembly next season.

(2) Raise fountain base from ground with wood strips so that base will not freeze to the ground surface.

(3) Cover or wrap the fountain with burlap or other absorbent material (old blanket or towel) and then cover securely with plastic, making sure that water will not accumulate in the basin or other fountain component and freeze;

(4) Check fountain periodically to insure that plastic is secure and water is not accumulating in any fountain component.

- G E N E R A L F O U N T A I N T I P S -

Install fountains on a level surface. You will need a properly grounded 110-volt (AC only) GFCI protected receptacle near the fountain for your pump. All pumps are submersible and must be completely underwater to function properly. Test all pumps and adjust to full output prior to assembly. It is not recommended that fountains be placed directly on grass or dirt. Position the channel opening at the base of each fountain toward the electrical outlet to be used since the pump cord will be threaded through this opening.

All of our cast stone is proudly



Made in USA